

Four Digit Universal Remote Code List

Here is the code list for recently purchased UR73A remotes and the IconRemote. Refer to the Owner's Manual for your remote for more information.

Contents

Direct Code Entry

Code Search

IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE

TV including LCD, Plasma, & Panel TVs

HDTV Set Top Boxes

VCR

CD

AUDIO

CABLE

SAT/DTV/WebTV

DVD

Laser Disc

DVR

DVD-Recorders + RW

Home Automation

Combo Devices

TV/VCR Combos

TV/DVD Combos

TV/VCR/DVD Combos

DVD/VCR Combos

DVR/SAT Combos

HTIB (Home Theater in a Box)

Direct Code Entry

1. Press and hold the SETUP button until the red indicator stays on, then release the SETUP button.
2. Press and release the desired Mode button (TV, VCR, etc.). The red indicator blinks, then stays lit.
3. Enter the 4 digit code from the code tables. Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
4. With your device on, press CHANNEL UP. If the device responds, no further programming is

required. Note: If some buttons do not operate your device, try one of the other codes for your brand.

Code Search

If after trying “Direct Code Entry” your device does not respond, or if your brand is not listed, try doing a search of the code library for your code by following these steps.

1. Manually turn on the device (TV, VCR, etc.) to be controlled.
2. Press and hold the SETUP button until the red indicator stays on, then release the SETUP button.
3. Press and release the desired Mode button (TV, VCR, etc.). The red indicator blinks once, then stays on.
4. Press the CHANNEL UP button repeatedly (up to 300 times) until the device to be controlled changes channel. The red indicator blinks, then stays lit.
5. Press and release MUTE to install the code. The indicator light goes off.

Most users will want to store VCR codes under the VCR button, Cable codes under CBL, etc. If you want to store a VCR code under CBL, etc., first follow the procedure for Direct Code Entry and press CBL in step 2 of Direct Code Entry, then enter ANY VCR code in step 3 of Direct Code Entry. Then follow the steps above for Code Search.

IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE

1. Press and hold the SETUP until the LED indicator lights steadily. Release Setup button.
2. Press the mode button that matches the equipment you want to identify. The LED blinks once.
3. Press and release SETUP. The LED blinks once.
4. To find the first digit, press each number button from 0 to 9 until the LED blinks. The number you pressed is the first digit of the code.
5. Press each number button from 0 to 9 again as above to find the second digit.
6. Press each number button from 0 to 9 again as above to find the third digit.
7. Press each number button in turn to find the fourth digit. When the fourth digit has been found, the LED goes out.

TV including LCD, Plasma, & Panel TVs

ABEX 0185

ACME 0008 0050

ADA 0020

ADC 0002 0006

ADMIRAL..... 0020 0226 0001

ADVENT 0176 0922
ADVENTURA..... 0174
AIKO 0058
AIWA 0195 0196 0227 0269
ALLERON 0051
AMARK 0020
AMTRON 0053
AKAI 0105 0002 0077 0254
ANAM NATIONAL 0053 0003
..... 0025 0042 0193
AOC 0004 0005 0009
..... 0014 0156 0175 0187
APEX 0214 0216 0215 0401
ARCHER 0020
ASPECT 0059
AUDIOVOX 0053
AXION 0177 0921
BANG & OLUFSEN 0190
BELCOR 0004
BELL & HOWELL 0031 0049
..... 0000 0001
BENQ 0081 0083 0101
BRADFORD..... 0053
BROKSONIC 0147 0135 0250
..... 0257 0310 0394
BROKWOOD 0004
CANDLE 0004 0009 0174 0008

CAPEHART 0175
CELERA..... 0214
CELEBRITY 0002
CENTRIOS 0169
CENTURION 0009
CETRONIC 0042
CHANGHONG 0214 0401
CITIZEN . 0004 0009 0053 0105 0109
..... 0189 0135 0001 0008 0042 0058
CLAIRTONE 0014
CLASSIC 0214 0401 0042
COLOR VOICE 0010
COLORTYME 0004 0009 0010
CONCERTO 0004 0009
CONCIERGE 0121
CONTEC 0053 0012 0014 0042
CORNEA 0050
CRAIG 0053 0042
CROSLEY 0062
CROWN 0053 0042
CURTIS MATHES 0031 0105 0130
..... 0004 0009 0000 0049
..... 0109 0358 0001 0015
CTX..... 0020
CXC 0053 0042
DAEWOO 0130 0004 0009 0100
..... 0005 0138 0043 0140 0039

..... 0252 0279 0444 0080 0042 0058

..... 0017 0010 0126 0018 0127 0019

DAYTRON 0004 0009

DELL 0209 0028 0132

DIAMOND VISION . 0210 0948 0092

DIGISTAR 1019 0165

..... 0118 0116 0167

DIMENSIA 0031 0000

DISNEY 0158

DUKANE 0059 0072

DUMONT 0121 0004

DURABRAND 0189 0135 0157

..... 0153 0254 0458 0217

DYNASTY 0042

ELEKTRA 0001

ELECTROBAND 0002 0014

ELECTROHOME 0004 0009

..... 0254 0003 0022

ELITE VIDEO 0197

EMERSON 0004 0009 0044 0135 0049 0051 0189 0053 0147 0039 0130 0227 0233 0250
0252 0254 0257 0265 0266 0310 0325 0456 0040 0041 0042 0021 0023 0024 0179 0045 0025
0027 0030 0032 0034 0035 0037

ENVISION 0004 0009 0074

ESA 0189

FISHER ... 0049 0110 0268 0180 0012

FUJITSU 0197 0051

FUNAI 0051 0189 0053 0227 0456 0042

FUTURETEC 0053 0042

GATEWAY 0046

GE 0031 0107 0164 0004 0009 0044 0054 0000 0342 0003 0125 0015 0022 0052 0087

GIBRALTER 0121 0004

GOLDSTAR 0004 0009 0005 0227
..... 0338 0012 0057 0080 0156

GRUNDY 0051 0053

GUESTVISION 0201

HAIER 0081 0216 0217 0157

HALLMARK 0004 0009

HARVARD 0053

HITACHI 0088 0059 0142 0060 0072 0004 0009 0091 0001 0012 0061 0137 0139 0141 0179
0227

HISENSE 0073 0182 0216

ILO 0198 1070 1024 1023

IMA 0053

INFINITY 0062 0288

INITIAL 1070

INSIGNIA 0103 0189 0217 0135
..... 0133 0116 0167 0456 0029

INTEGRA 0181

INTEQ 0121

JANEIL 0174

JBL 0062

JCB 0002

JC PENNEY 0031 0004 0005 0009 0105 0107 0109 0054 0000 0087 0008 0012 0015 0022
0030 0052

JENSEN 0004 0009 0133

JVC 0060 0026 0197 0069 0247 0923 0012 0065 0067 0141

KAWASHO 0004 0009 0002
KAYPANI 0175
KEC 0042
KENWOOD 0004 0009
KLH 0214
KLOSS NOVABEAM..... 0068 0174
KONKA 0053 0011 0016 0047 0066 0103 0412 0413 0029
KTV 0053 0014 0021 0042 0070
KURAZAI 0001
LASONIC 0210 0948
LG 0004 0050 0009 0005 0227 0338 0012 0057 0080 0156
LIQUIDVIDEO 0177 0168 0921
LODGENET 0031 0202 0000 0001
LOEWE 0211 0062
LOGIK 0031 0000 0001
LUCE 0055
LUXMAN 0004 0009
LXI 0031 0004 0009 0049 0062 0107 0109 0000 0227 0015
MAGNASONIC 0051
MAGNAVOX 0062 0004 0009 0456 0183 0226 0288 0008 0068 0075 0141
MAJESTIC 0031 0000 0001
MARANTZ 0062 0181 0004 0009
MEDION 0213 0198 0158
MEGATRON 0004 0009 0059
MEI 0014
MEMOREX 0004 0009 0049 0051 0135 0031 0000 0268 0310 0001
MGA 0004 0005 0009 0051 0012 0022 0141 0180

MIDLAND 0031 0121 0054 0107 0015
MINUTZ 0052
MITSUBISHI ... 0005 0151 0051 0004 0009 0254 0022 0141 0180
MONIVISION 0036
MONTGOMERY WARD 0031 0001 0000
MOTEVA 0049
MOTOROLA 0020 0003
MTC 0004 0005 0009 0105 0109 0014
MULTITECH 0053
MULTIVISION 0084
MYRON & DAVIS 0212
NAD 0004 0009 0109 0185
NEC 0181 0004 0005 0009 0003 0010 0095 0141
NET TV 0046 0124
NEXXTECH 1052 0167
NIKEI 0042
NIKKO 0004 0009 0058
NORCENT..... 0216 0043 0056
NTC 0058
OLEVIA 1027
ONCOMMAND 0201
ONKING 0042
ONWA 0053 0042
OPTIMUS 0170 0185 0374 0381
OPTOMA 1028
OPTONICA 0020 0095
ORION 0121 0135 0035

PANASONIC 0171 0148 0054 0170 0062 0374 0381 0437 0950 0003 0070

PHILCO 0062 0004 0005 0009 0183 0068 0075 0141 0003 0008

PHILIPS 0062 0204 0184 0208 0205 0206 0207 0004 0189 0183 0199 0200 0288 0456
0003 0008 0068 0075 0086 0087 0141

PHILIPS-MAGNAVOX 0062 0204 0207 0183 0226 0288

PILOT 0004

PIONEER 0185 0181 0072 0004 0009 0090 0179

PIVA 1075

POLAROID 0182 0173 0133

PORTLAND 0004 0005 0009 0058 0138 0130

PRECISION 0166

PRICE CLUB 0105

PRIMA 1019 0165 0116 0167

PRINCETON GRAPHICS . 0020 0099

PRISM 0054

PROSCAN..... 0031 0107 0015 0000 0162 0163

PROTON 0192 0004 0009 0093 0175 0186

PROVIEW 1025 1026

PULSAR..... 0121 0004

QUASAR 0171 0148 0054 0170 0062 0374 0381 0003 0070

RADIO SHACK 0031 0004 0048 0049 0053 0170 0009 0227 0342 0000 0012 0041 0042 0095

RCA 0031 0004 0048 0054 0094 0100 0102 0107 0129 0191 0005 0009 0000 0162 0163 0342
0003 0015 0022 0096 0113 0125 0179 0187 0188

REALISTIC 0031 0004 0048 0049 0053 0170 0009 0000 0227 0012 0041 0042 0095

RHAPSODY 0014

RUNCO 0121 0181 0111

SAMPO 0124 0046 0004 0009 0175 0012

SAMSUNG 0105 0077 0076 0109 0007 0009 0004 0005 0085 0172 0942 0358 0012 0015
0080 0104 0106

SAMSUX 0009
SAMTRON 0105
SANSUI 0135 0310
SANTECA 0194
SANYO 0049 0097 0110 0004 0268 0012 0108 0180
SCEPTRE 1167 1132 0149
SCOTCH 0004 0009
SCOTT 0004 0009 0051 0053 0024 0035 0042
SEARS 0031 0062 0049 0051 0105 0004 0009 0107 0109 0110 0189 0000 0112 0079 0394
0456 0012 0015 0180
SELECTRON 1022 1020 1021
SHARP 0079 0123 0063 0020 0004 0009 0226 0266 0006 0095 0122
SHOGUN 0004
SIGNATURE 0031 0000 0001 0023
SIMPSON 0008
SONIC 0014
SONY 0128 0013 0002 0071 0380
SOUNDESIGN 0004 0009 0051 0053 0008 0042
SPECTRAVISION 0203
SQUAREVIEW 0189
SSS 0004 0053 0042
STARLITE 0053
STAR SIGHT 0064
SUPRA..... 0004 0082
SUPERSCAN 0112 0079 0456
SUPERSONIC 0944
SUPREMACY..... 0174
SUPREME..... 0002

SVA 0216

SYLVANIA 0062 0004 0009 0135 0189 0183 0227 0456 0008 0068 0075 0141 0161

SYMPHONIC 0053 0189 0227 0456 0024

SYNTAX 1027

TANDY 0020

TATUNG 0081 0198 0003

TECHNICS 0054

TECHWOOD 0004 0009 0054

TEKNIKA 0031 0004 0005 0009 0051 0053 0105 0109 0170 0000 0174 0001 0008 0012 0042
0058

TELECAPTION 0117

TELERENT 0031 0000 0001

TERA 0004 0186

TEVION 0198

TMK 0004 0009

TOSHIBA 0159 0178 0109 0120 0181 0105 0049 0095 0170 0260 0358 0394 0924 0012 0095
0117 0141 0156

TRUTECH 1029

UNIVERSAL 0052 0087

VICTOR 0060

VIDTECH 0004 0005 0009

VIEWSONIC 0046 0072

VIKING 0174

VIZIO 0081

WARDS 0031 0062 0004 0005 0009 0051 0000 0068 0075 0087 0095 0119 0052 0001
0008 0024

WESTINGHOUSE 0143 0114

WHITE WESTINGHOUSE 0100 0130 0138 0136 0227 0279 0080

YAMAHA 0170 0004 0005 0009

ZENITH .. 0121 0009 0050 0078 0091 0138 0059 0131 0038 0111 0134 0153 0064 0004 0135 0226
0227 0245 0247 0252 0266 0288 0310 0338 0358 0023 0058 0039 0001

HDTV Set Top Boxes

GO VIDEO HDT100 0610
HITACHI 61HDX98B 0632
HUGHES HTL-HD ... 0607 0632 0641
HUGHES HIRD-E8 .. 0607 0632 0641
LG LSS-3200A 0607 0632 0641
LG HTL-HD 0607 0632 0641
MITSUBISHI SR-HD5 0632
MITSUBISHI SRHD400 0632
MITSUBISHI SRHD500 0632
MOTOROLA HDT100 0618
PHILIPS DSHD800R 0632
PIONEER SH-D505 0604
PROSCAN PSHD105 0636
RCA HD65W20 0658
RCA PSHD105 0636
RCA DTC-100 0636
RCA DTC-210 0636
SAMSUNG SIR-T165 0583
SAMSUNG SIR-T351 0583
SAMSUNG SIR-TS160 0619
SAMSUNG SIR-TS360 0619
SONY SATHD100 0623
SONY SATHD200 0623
SONY SATHD300 0623

SYLVANIA 6900DTD 0581
 TOSHIBA DST3000 0607 0641
 TOSHIBA DST3100 0607 0641
 TOSHIBA DW65X91 0607 0641
 ZENITH HDSAT420 0634
 ZENITH HDSAT520 0634
 ZENITH DTV1080 0634

VCR

ACCELE..... 0354
 ADMIRAL..... 0226
 ADVENTURA 0251
 AIKO 0252
 AIWA 0245 0227 0269 0251
 AKAI 0227 0229 0228 0230
 0231 0254 0303 0337
 ALLEGRO 0247 0329 0243
 AMERICAN HIGH 0292
 APEX 0949
 ASHA 0354
 AT&T 0373
 AUDIO DYNAMICS 0376
 0377 0234
 AUDIOVOX 0245
 BELL & HOWELL 0268
 BEAUMARK 0354
 BROKSONIC 0256 0250 0257
 0310 0394 0967 0237 0289

CALIX 0245
CANDLE 0240 0245 0354
..... 0234 0242 0244
CANNON 0225 0292 0339
CAPEHART 0329
CARVER 0287
CCE 0252 0356
CINEVISION 0245
CITIZEN 0240 0245 0252
..... 0354 0234 0242 0244
COLORTYME 0234
COLT 0356
CRAIG 0245 0354 0356 0248
CURTIS MATHES 0225 0287 0227
..... 0334 0354 0358 0234 0249 0292
CYBERNEX 0354
DAEWOO 0279 0240 0250 0252
..... 0334 0242 0244 0251 0971
DBX 0376 0377 0234
DIAMOND VISION 0896
DIMENSIA 0225
DURABRAND 0245
DYNATECH 0227 0251
ELECTROHOME 0245 0254
ELECTROPHONIC 0245
EMERSON 0250 0245 0252
..... 0256 0257 0290 0310 0325

..... 0354 0240 0233 0227 0265 0266
..... 0268 0269 0458 0456 0231 0237
..... 0249 0251 0254 0259 0262 0263
..... 0270 0289 0292 0301 0330 0341
FISHER 0304 0268 0267 0287
..... 0234 0248 0273 0274
FUJI 0229 0292
FUNAI 0227 0456 0458 0251
GARRARD 0251
GE 0225 0311 0335
..... 0342 0354 0278 0292
GOLDSTAR 0227 0245 0338
..... 0329 0346 0234
GRADIENTE 0251
GO-VIDEO 0354 0375 0407
..... 0426 0455 0971 0368
HARLEY DAVIDSON 0251
HARMAN KARDON 0234 0254
HARWOOD 0356
HEADQUARTER 0268
HITACHI 0369 0227
..... 0347 0303 0332
HI-Q 0248
INFINITY 0288
INSIGNIA 0245
INSTANT REPLAY 0227 0292
INTEQ 0245

JC PENNEY 0225 0245 0268
..... 0354 0369 0376 0377
..... 0292 0303 0332 0343 0234
JCL 0292
JENSEN 0369 0303
JVC 0376 0377 0268 0247
..... 0418 0900 0234 0303
KENWOOD 0268 0376
..... 0377 0234 0303
KLH 0356
KODAK 0245 0292
LG 0227 0329 0338 0907
LITEON 1069
LLOYD 0227 0251
LOGIK 0356
LXI 0227 0245
MAGNAVOX 0287 0288 0329
..... 0227 0226 0225 0456
..... 0286 0235 0914 0969 0292
MAGNIN 0354
MARANTZ 0287 0268 0376 0377
..... 0289 0292 0339 0234
MARTA..... 0245
MATSUSHITA 0292
MEDION 0896
MEI 0292
MEMOREX 0287 0245 0268

..... 0304 0310 0329 0354 0226
..... 0227 0337 0248 0251 0292
MGA 0290 0254
MGN TECHNOLOGY 0354
MIDLAND 0278
MINOLTA 0369 0332
MITSUBISHI 0290 0298 0369
..... 0376 0377 0295 0254
MONTGOMERY WARD ... 0226 0300
MOTOROLA 0226 0292
MTC 0227 0354 0251
MULTITECH 0227 0354
..... 0251 0278 0356
NEC 0268 0376 0377 0289
..... 0301 0302 0303 0234 0249
NEXXTECH 0327 0449 0949
NIKKO 0245
NOBLEX 0354
OLYMPUS 0292
OPTIMUS 0239 0354 0363 0245
..... 0361 0374 0381 0226
OPTONICA 0354 0300
ORION 0256 0310
PANASONIC 0363 0381 0374
..... 0373 0225 0437 0292
PENTAX 0369 0234 0332
PHILCO 0287 0225 0235 0292

PHILIPS 0287 0288 0344 0345
..... 0371 0378 0383 0456 0286 0292
PHILIPS-MAGNAVOX 0287
..... 0288 0226
PILOT 0245
PIONEER 0305 0369 0376
..... 0377 1084 0343
POLAROID 0949
PORTLAND 0242 0244
PROSCAN..... 0225 0308
PROTEC 0356
PULSAR 0329
QUARTER 0268
QUARTZ 0268
QUASAR 0363 0374
..... 0225 0381 0292
RADIO SHACK 0225 0226 0227
..... 0239 0245 0268 0342
..... 0354 0361 0363 0248 0251
..... 0254 0274 0292 0300 0337
RADIX 0245
RANDEX 0245
RCA 0225 0245 0308 0309
..... 0311 0312 0313 0314
..... 0315 0316 0335 0342 0354
..... 0369 0228 0278 0292 0332
REALISTIC 0225 0226 0227

..... 0245 0268 0354 0361 0363 0248
..... 0251 0254 0274 0292 0300 0337
REPLAYTV 0373
RICOH 0353
RIO 0245 0405
RUNCO 0329
SAMSUNG 0354 0358 0240 0369
..... 0455 0942 0963 0230 0337
SANKY 0226 0329
SANSUI 0310 0376 0377
..... 0394 0256 0967 0303
SANYO ... 0304 0267 0268 0354 0248
SCOTT 0240 0250 0257
..... 0290 0341 0237 0263
SEARS 0363 0245 0268 0287
..... 0369 0394 0456 0248
..... 0273 0274 0292 0332 0343
SHARP 0360 0361 0226 0227
..... 0266 0242 0254 0300
SHINTOM 0229 0353
..... 0369 0356 0357
SHOGUN 0354
SIGNATURE 0227
SINGER 0292 0356
SONIC BLUE 0373
SONY 0379 0324 0229 0323 0353
..... 0389 0372 0364 0365 0366 0380

STS 0369 0292 0332
SUPERSCAN 0456
SYLVANIA 0227 0287 0290 0225
..... 0456 0251 0292 0236 0458
SYMPHONIC .. 0227 0236 0456 0251
TANDY 0227 0268
TASHIKO 0245
TATUNG 0303
TEAC 0227 0251 0303
TECHNICS 0292
TECHWOOD 1071
TEKNIKA 0227 0245
..... 0325 0251 0292
TiVo 0371 0372
TMK 0354 0249 0301
TOSHIBA 0240 0261 0260
..... 0287 0290 0358 0369
..... 0924 0398 0274 0341
TOTEVISION 0245 0354
UNITECH 0354
VECTOR RESEARCH 0240 0376
..... 0377 0234
VICTOR 0376 0377
VIDEO CONCEPTS 0240 0376
..... 0377 0234 0254
VIDEOSONIC 0354
WARDS 0225 0226 0227 0240

..... 0245 0354 0369 0248 0251 0254
 0292 0300 0326 0332 0341 0356
 WHITE WESTINGHOUSE 0227
 0279
 XR-1000 0251 0292 0356
 YAMAHA 0234 0303 0376 0377
 ZENITH 0329 0247 0252 0266
 0288 0226 0227 0338 0347
 0353 0358 0245 0229 0310
 0232 0376 0377 0279 0368 0243

CD

ADC 0888
 ADCOM 0661 0714
 AIWA 0663 0707 0842
 AKAI 0715 0737 0830
 AUDIO TECHNICA 0665
 CALIFORNIA AUDIO LABS 0716
 CAPETRONIC 0669
 CARVER 0666 0667 0668 0825
 CASIO 0777
 CENTRIOS 0783
 CITIZEN 0826
 CURTIS MATHES 0777
 DENON 0670
 EMERSON 0661 0673
 FISHER ... 0667 0675 0676 0677 0718
 GENEXXA 0673 0678 0719

GOLDSTAR 0720
HARMAN KARDON 0680 0691
HITACHI 0678
INKEL 0681
JC PENNEY 0690 0777
JVC 0682 0813
KENWOOD 0679 0683 0685
..... 0727 0728 0828
KRELL 0666
KYOCERA 0888
LUXMAN 0686 0687 0729 0738
LXI 0777
MAGNAVOX 0666 0731 0800
MARANTZ 0666 0688 0689 0732
MCS 0690 0777
MGA 0691
MISSION 0666
MITSUBISHI 0691 0692
NAD 0721 0743
NAKAMICHI 0693 0694 0831
NEC 0690
NEXXTECH 0780 0782 0788
..... 0789 0829 0854 0861
NIKKO 0665 0673 0676
NSM 0666
ONKYO 0695 0696 0722 0811
OPTIMUS 0667 0668 0678

..... 0679 0697 0698 0699
..... 0700 0744 0747 0751
PANASONIC 0716 0733
..... 0740 0820 0862
PHILIPS 0666 0731 0825
PIONEER 0678 0701 0702
..... 0719 0750 0837 0876
PROTON 0666
QUASAR 0716
RADIO SHACK 0668 0699 0706
..... 0750 0786 0868 0874 0876
RCA 0661 0667 0703 0723 0750
..... 0795 0844 0873 0874 0876
REALISTIC 0661 0667 0669 0673
..... 0678 0689 0697 0699
ROTEL 0666
SAE 0666
SAMSUNG 0741
SANSUI 0666 0704 0723 0734
SANYO ... 0667 0705 0718 0735 0742
SCOTT 0661 0673
SEARS 0679 0689 0777
SHARP 0679 0689
SHERWOOD 0681 0689
..... 0698 0706 0859
SHURE 0690
SONY 0707 0792 0794 0800

STS 0888
SYLVANIA 0666
SYMPHONIC 0709
TEAC 0676 0689 0699
..... 0709 0710 0711 0856
TECHNICS 0716 0733 0820 0862
THETA DIGITAL 0731
TOSHIBA 0721
VICTOR 0682
YAMAHA 0665 0712
..... 0713 0724 0846
ZENITH 0676 0730
..... 0759 0784 0850

AUDIO

AIWA 0839 0842 0851 0860
APEX 0436
APPLE IPOD 0885
BOSE 0672
CARVER 0825
CENTRIOS 1055 0854
CITIZEN 0826
CRITERION 0448
DENON 0803 0817 0852
DELPHI 0708
FISHER 0814 0821
GOLDSTAR 0766
HARMAN KARDON 0804 0818

iPOD 0884

JVC 0790 0813 0819

KENWOOD 0683 0808 0816
..... 0828 0832 0869

KOSS 0415

MAGNAVOX ... 0796 0814 0915 0756

MARANTZ 0688 0824

MITSUBISHI 0877

NAD 0721 0739 0743

NEO 0725

NEXXTECH 1055 0780 0782 0788
..... 0789 0829 0854 0861

NORCENT..... 0907

ONKYO 0805 0811 0812 0892

OPTIMUS 0667 0747 0748 0749
..... 0751 0752 0754 0793

PANASONIC ... 0791 0810 0815 0823
..... 0863 0864 0891 0950

PHILIPS 0755 0814
..... 0823 0824 0825

PIONEER 0837 0866
..... 0867 0878 0893

RADIO SHACK 0706 0754 0793
..... 0806 0865 0866 0867
..... 0868 0875 0878 0879

RCA 0717 0726 0772 0781 0795
..... 0827 0845 0866 0867 0870 0871

..... 0872 0875 0878 0879 0449 0895
REALISTIC 0822
RIO 0405
SABA 0894
SAMSUNG 0454
SANYO 0705
SCOTT 0768
SHARP 0671 0684 0809
SHERWOOD ... 0706 0806 0858 0859
SKYFI 0725
SONY 0323 0778 0779
..... 0785 0797 0798 0799 0833
..... 0834 0835 0836 0843 0909
TAO 0725
TEAC 0710 0807 0855 0856 0857
TECHNICS 0791 0810 0815
..... 0823 0863 0864
TEVION 0448
VENTURER 0745
XM RADIO 0708 0725
YAMAHA 0801 0802 0838 0840
..... 0841 0846 0847 0848 0849
ZENITH 0676 0730 0749
..... 0759 0765 0766 0784
..... 0814 0787 0850 0405

CABLE

ABC 0461 0463 0464 0465 0466
ADELPHIA 0512 0511
ALLEGRO 0524 0525
AMERICAST 0527
ANTRONIX 0468 0469
ARCHER 0468 0469 0470 0471
AT&T 0511
BELL SOUTH 0527
CABLETENNA 0468
CABLEVIEW 0468
CABLEVISION 0506
CENTURY..... 0471
CITIZEN 0471
COGECO 0511
COLOR VOICE 0472 0473
COMCAST..... 0511
COMTRONICS 0474 0475
CONTEC 0476
DIGITAL MUSIC EXPRESS 0514
EASTERN 0477
EVERQUEST 0474
GARRARD 0471
GC ELECTRONICS 0469
GEMINI 0536 0479
GE 0549
GENERAL INSTRUMENT (GI) . 0509
..... 0461 0465 0511 0513 0518

..... 0530 0531 0514 0464 0463
HAMLIN 0461 0480 0481 0482
HITACHI 0463
ILLICO 0506
JASCO 0471
JERROLD 0509 0461 0465 0518
..... 0463 0464 0520 0526
MAGNAVOX 0485
MEMOREX 0486
MOTOROLA 0509 0465 0513 0518
..... 0530 0531 0464 0511 0526 0463
MOVIE TIME 0487
NSC 0487
OAK 0476 0489
PACE 0532
PANASONIC 0460 0508
PARAGON 0486 0488
PHILIPS 0471 0479 0485
..... 0490 0491 0492
PHILIPS-MAGNAVOX 0505 0534
PIONEER 0478 0506 0493 0494
PULSAR 0486
RADIO SHACK 0505 0534 0525
RCA 0460 0471 0507
REALISTIC 0469
REGAL 0482
REGENCY 0477

REMBRANDT 0463
ROGERS 0506
RUNCO 0486
SAMSUNG 0474 0494
SCIENTIFIC ATLANTA 0498 0497
..... 0506 0535 0512 0466 0496
SHAW 0511
SIGNAL 0474
SIGNATURE 0463
SL MARX 0474
SPRUCER 0460
STANDARD 0499
STARCOM 0461 0518
STARGATE 0474
STAR SIGHT 0507
STAR TRAK 0516
TANDY 0500
TELEVIEW 0474
TEXSCAN 0499
TIME WARNER 0506
TOCOM 0464 0501 0513 0520
TOSHIBA 0486
TV86 0487
UNIKA..... 0468 0469 0471
UNITED CABLE 0461
UNIVERSAL 0468 0469 0470
..... 0471 0502 0524

VIDEOWAY 0504
 VIEWSTAR 0475 0485 0487 0500
 VIDEO TECH 0550
 VIDEOTRON 0506
 ZENITH 0503 0525 0471
 0486 0521 0522 0523
 ZENITH NETWORK 0527

SAT/DTV/WebTV

Where codes are shown like this [###]
 each one can be used if you have 2 or
 more of the SAME device.

AMPLICA 0575
 BELL EXPRESSVU 0654 0647
 0655 0628
 CHANNEL MASTER 0577
 0578 0579
 CHAPPARAL 0560 0561
 CHEYENNE 0561
 DRAKE 0562 0574 0587
 DREAMBOX 0620
 DIRECTV 0622 0632 0629 0621
 0623 0576 0586 0616 0613
 0630 0634 0636 0638 0641 0652
 0653 0657 0659 0607 0619 0641
 DISH NETWORK [0655] [0647]
 0628 0612 0654 0588 0589 0590

DISHPRO 0588 0589 0590 0654
DX ANTENNA 0568 0582
ECHOSPHERE 0628
ECHOSTAR [0655] [0647]
..... 0628 0612 0654 0588 0589 0590
EXPRESSVU 0654 0647 0655 0628
FORTEC STAR 0569 0555 0556
..... 0557 0558 0559
FUJITSU 0591 0592
GE 0636 0649 0637 0622
..... 0653 0650 0651 0652
GEMINI 0595
GENERAL INSTRUMENT (GI)
..... 0648 0640 0645
..... 0564 0565 0566 0593
..... [0627] [0642] [0643] [0644]
GLOBECAST 0554
GO VIDEO 0610
HITACHI 0638 0629 0630
..... 0632 0641 0607
HUGHES NETWORK [0632]
..... [0638] [0629] [0630]
..... 0641 0621 0607 0580
JVC 0628 0612
KENWOOD 0598
LUXOR 0599
MAGNAVOX 0576 0612 0639

MACOM 0600

MITSUBISHI 0641 0632 0638
..... 0629 0630 0607

MOTOROLA 0648 0618

NORSTAT 0601

PACE 0614 0615 0646

PANSAT 0584 1048

PANASONIC 0626 0586 0596

PRIMESTAR..... 0627 0640

PHILIPS 0576 0612 0621 0629
..... 0630 0632 0638 0641 0639 0607

PHILIPS-MAGNAVOX 0576
..... 0612 0639

PIONEER 0604

PROSAT 0563

PROSCAN..... 0636 0637 0650
..... 0653 0651 0652

RCA 0636 0649 0637 0622 0658
..... 0653 0650 0651 0652 0098

REALISTIC 0567 0603

SAMSUNG 0594 0583
..... 0613 0616 0619

SHARP 0604

SKY NETWORK 0614 0615 0646

SIERRA I II III 0561

SONY 0623 0657 0659 0585 0602

STARCHOICE 0640 0645 0627

STAR SIGHT 0633
 STAR TRAK 0608
 STS 0568 0570 0571
 SUPER GUIDE 0609
 SYLVANIA 0581
 TOSHIBA 0641 0632 0638 0629
 0630 0607 0572 0624 0625 0631
 ULTIMATE TV..... 0653 0659
 UNIDEN..... 0633 0573 0611
 UNITED 0597
 VIDEO CIPHER II 0574
 WEB TV 0612 0585
 ZENITH 0617 0634 0656 0595
 0646 0562 0574 0587 0635

DVD

ADVENT 0922
 AFREEY 0417
 AIWA 0414
 AKAI 0395 0435
 AMES 0431
 AMW..... 0917 0918
 ANABA 0961
 APEX 0386 0390 0391 0392
 0424 0430 0436 0439 0445
 0457 0459 0938 0913 0401 0949
 ASPIRE 0933
 A-TREND 0393

AUDIOVOX 0921

AXION 0921

B & K 0978

BLAUPUNKT..... 0430

BODYSONIC 0417

BOSE 0672

BOSS 0911

BROKSONIC 0932 0967 0394

CENTRIOS 0951 1067 1068 0921
..... 1054 1055 1059 1060
..... 1061 1064 1065 1062 0449

CHANGHONG 0401

CINEVISION 0405

CITECH 1073

CITIZEN 1073

CLASSIC 0431 1051 0401

COBY 0926 0946 0947
..... 0916 0445 0928 0894

CONCEPT 0430

CRITERION 0448

CURTIS INTERNATIONAL 0929
..... 0928

CYBERHOME 0393 0985 0939

CYTRON 0446 0388

DAEWOO 0440 0441
..... 0444 0971 0965

DENON 0400 0421

DENZEL 0428
DESAY 0958
DIAMOND VISION 0948
..... 0892 0896
DIGIX 0934
DIGITREX 0445
DISNEY 0458
DUAL 0447 0984 0956 0428 0446
DURABRAND 0449 0405 0446
DVD 2000 0402
ELTA 0434 0435
EMERSON 0405 0940
..... 0899 0456 0458
ESA 0956
FARENHEIT 0960
FISHER 0416
FUNAI 0456 0458
GE 0409 0430
GOLDSTAR 0405
GO-VIDEO 0431 0937 0971
..... 0454 0902 0901 0407 0426 0455
GPX 0936 0944
GRADIENTE 0415
GREENHILL 0430
HAAZ 0451 0452
HAIER 0935
HARMAN KARDON 0427

HITACHI 0404 0407 0428 0419
HITEKER 0445
HUMAX 0912
ILO 0959 1070
INFINITY 0417
INSIGNIA 0405 0456
..... 0921 0430 0905
INITIAL 0430 1070
INTEGRA 0422
JBL 0427
JVC 0406 0964 0900
..... 1072 0418 0923
JWIN 0390 0893 0895
KAWASAKI 0945 0449
KENWOOD 0400 0429
KISS 0428
KLH 0430 0906 0386
KONKA 0410 0411
..... 0412 0413 0905
KOSS 0415 0388
KXD 0894
LASONIC 0451 0948
LENOXX 0931 0435
LG 0405 0972 0907
LINN 0443
LITEON .. 0982 0902 0898 0959 1069
LIQUIDVIDEO 0921

MAGNAVOX ... 0398 0408 0979 0981
..... 0980 0456 0915 0914 0969
MARANTZ 0398 0405
..... 0408 0423 0981
MAXENT 0923
MEDION 0911 0446
..... 0903 0896 0959
MEMOREX 0446 1050
MERIDIAN 0398
MICROSOFT 0409
MINTEK 0430
MITSUBISHI 0402
MUSTEK 0431
MYRON & DAVIS 0962
NAD 0405 0433
NAKAMICHI 0432
NESA 0430 0962
NEXXTECH 0952 0954 0955
..... 0956 0934 1052 1054 1055
..... 1056 1057 1063 1064 0449 0949
NORCENT..... 0926 0982
..... 0927 0925 0928
ONKYO 0422 0975
OPTIMUS 0404
ORION 0394
ORITRON 0415 1060
PANASONIC 0396 0400 0974

..... 0970 0437 0950 0387
PACIFIC 0446
PHILIPS 0398 0408 0423 0755
..... 0979 0981 0980 0456 0458 0969
PHILIPS-MAGNAVOX 0398 0408
..... 0423 0979 0980
PIONEER 0403 0404 0976
..... 0977 0968 0909 1084
PIVA 1075
POLAROID 0385 0957 0949
POLK AUDIO 0398 0408 0981
PORTLAND 0435
PROLINE 0415
PROSCAN..... 0409 0890
PROSONIC 0926
PYLE 0910
RADIO SHACK 0449 0453
..... 0919 0920
RCA 0409 0430 0449
..... 0453 0920 0890
REGENT 0931
REOC 0451
RIO 0405
RJ TECHNOLOGY 1076
ROSEN 0930
ROTEL 0406
SABA 0919

SAMSUNG 0407 0454 0942
..... 0963 0891 0455
SAMPO 0417
SANSUI 0394 0967
SANYO 0904 0416
SEARS 0394 0456
SEG 0428
SELECTRON 1077 1078 1079
..... 1080 1081 1082 1083
SHARP 0397 0897 0908
SHERWOOD 0425
SHINCO 0430
SHINSONIC 0430
SONIC BLUE 0937
SONY 0987 0988 0989
..... 0399 0986 0389
SOUNDSTORM 0910 0911
SUNGALE 0953
SUPERSCAN 0456
SUPERSONIC 0944
SV2000 0456
SYLVANIA 0456 0458
SYMPHONIC 0456 0458 0899
TEAC 0404 0449
TECHNICS 0400
TECHWOOD 0433 1071
TERAPIN 0943

TEVION 0388 0446 0447
 0448 0450 0451 0452
 THETA DIGITAL 0404
 TIVO 0912 0909
 TOSHIBA 0394 0398 0973 0924 0983
 TREDEX 0941
 TRUTECH 1053
 UNITED 0449
 VENTURER 0449
 WHARFEDALE 0442 0417
 WHITE WESTINGHOUSE 0458
 X-BOX 0409
 XENIUS 0388
 YAMAHA 0400 0420
 0979 0980 0408
 YAMAKAWA 0438 0428 1058
 ZENITH 0405 0907

Laser Disc

DENON 0305
 PIONEER 0305
 PROSCAN..... 0308
 RCA 0308
 SANYO 0232
 SONY 0323
 ZENITH 0232

DVR

Where codes are shown like this [###] each one can be used if you have 2 or more of the SAME device.

AT&T 0373
 HUGHES 0580
 HUMAX 0912
 PANASONIC 0373 0387
 PHILIPS [0371] [0344] [0345]
 PIONEER 0909 0977
 RCA 0409
 REPLAYTV 0373
 SONIC BLUE 0373
 SONY 0372 0657 0359
 TiVo 0371 0372 0344 0345
 0657 0983 0912 0909
 TOSHIBA 0983

DVD-Recorders + RW

Where codes are shown like this [###] each one can be used if you have 2 or more of the SAME device.

APEX 0938
 ASPIRE 0933
 BROKSONIC 0967
 CENTRIOS 0951 1060 1061
 COBY 0894
 CYBERHOME 0939
 EMERSON 0899
 GO-VIDEO 0431 0902 0901
 HITACHI..... 0419

HUMAX 0912
ILO 0959
JVC 0900 1072
KXD 0894
LG 0907
LITEON 0902 0898 0959
MAGNAVOX [0979] [0980]
MEDION 0903 0959
MEMOREX 1050
MUSTEK 0431
ORITRON 1060
PANASONIC 0387
PHILIPS [0979] [0980]
PHILIPS-MAGNAVOX [0979]
..... [0980]
PIONEER 0977 0909 1084
POLAROID 0385
RCA 0409
SAMSUNG 0891
SANYO 0904
SELECTRON 1080
SHARP 0897
SONY [0987] [0988] [0989]
SYMPHONIC 0899
TRUTECH 1053
TOSHIBA 0973 0398
YAMAHA [0979] [0980]

ZENITH 0907

Home Automation

GE HOMEMINDER 0996

HOME AUTOMATION 0998

Combo Devices

For Combo Devices, in many cases a single code operates both parts of the device (e.g. the TV and the VCR). In other cases you need to set up two codes. For example, one for the TV and one for the VCR. Where codes are shown below as [### ###] the first code operates the first part of the device's name, and the second code operates the second part. E.G., for a TV/VCR device, the first code operates the TV and the second code operates the VCR.

TV/VCR Combos

Where the code is listed as [### ###] the first is for the TV and the second is for the VCR. Otherwise just the one code operates both the TV and the VCR.

ADMIRAL..... 0226

AIWA 0227 0269

AKAI 0254

BROKSONIC 0310 [0147 0250]

..... [0147 0257]

CURTIS MATHES - 0358

DAEWOO .. [0039 0252] [0138 0279]

DIAMOND VISION [0092 0896]

DURABRAND [0153 0245]

ELECTROHOME 0254

EMERSON 0227 0233 0254 0264
... 0265 0266 0310 0325 [0039 0252]
..... [0147 0250] [0147 0257]
FISHER 0268
FUNAI 0227
GE 0342
GOLDSTAR 0227 0338
HITACHI 0227
JVC 0247
INFINITY 0288
LG 0227 0338
LXI 0227
MAGNAVOX 0226 0288 0456
MEMOREX 0268 0310
MITSUBISHI 0254
PANASONIC 0374 0381
PHILIPS 0288 0456
PHILIPS-MAGNAVOX 0226 0288
OPTIMUS 0374 0381
QUASAR 0374 0381
RADIO SHACK 0227 0342
RCA 0342
REALISTIC 0227
SAMSUNG 0358 0942
SANSUI 0310
SANYO 0268
SHARP 0226 0266

SONY 0380
 SYLVANIA 0227
 SYMPHONIC 0227
 TOSHIBA 0260 0358
 WHITE WESTINGHOUSE 0227
 [0138 0279]
 ZENITH 0226 0227 0247 0266
 ... 0288 0310 0338 0358 [0039 0252]
 [0153 0245] [0138 0279]

TV/DVD Combos

Where the code is listed as [### ###] the first is for the TV and the second is for the DVD. Otherwise just the one code operates both the TV and the DVD.

ADVENT 0922
 APEX [0214 0401]
 AXION [0177 0921]
 BROKSONIC 0394
 CHANGHONG [0214 0401]
 CLASSIC [0214 0401]
 DAEWOO [0140 0444]
 DIAMOND VISION [0210 0948]
 [0092 0896]
 DURABRAND [0153 0405]
 EMERSON 0456
 FUNAI 0456
 GPX 0944

HAIER	0935
ILO	1070
INITIAL	1070
INSIGNIA	0456 [0029 0905]
JVC	0923
KAWASAKI	0945
KONKA	0412 0413
LASONIC	[0210 0948]
LIQUIDVIDEO	[0177 0921]
MAGNAVOX	0456
MEMOREX	0394
NEXXTECH	1052
PANASONIC	0437 0950
PHILIPS	0456 [0189 0458]
PIVA	1075
SAMSUNG	0942
SANSUI	0394
SEARS	0394
SUPERSONIC	0944
SYLVANIA	0456
SYMPHONIC	0456
TOSHIBA	0394 0924

TV/VCR/DVD Combos

Where the code is listed as [### ###] the first is for the TV and the second is for the VCR/DVD. Otherwise just the one code operates both the TV and the VCR/DVD.

BROKSONIC	0932
DIAMOND VISION	[0092 0896]

MAGNAVOX	0456
PANASONIC	0437
PHILIPS	0456
SAMSUNG	0942
SEARS	0456
SUPERSCAN	0456
SYLVANIA	0456
TOSHIBA	0924

DVD/VCR Combos

Where the code is listed as [### ###] the first is for the DVD and the second is for the VCR. Otherwise just the one code operates both the DVD and the VCR.

APEX	0949
BROKSONIC	0394 0967
CINEVISION	[0405 0245]
DAEWOO	0971
DIAMOND VISION	0896
DURABRAND	[0405 0245]
EMERSON	0456 [0458 0227]
FISHER	[0416 0267]
FUNAI	0456 [0458 0227]
GO-VIDEO	0407 0426 0455 0971
HITACHI	[0419 0227]
INSIGNIA	[0405 0245]
JVC	0418 0900
LG	0907
LITEON	1069
MAGNAVOX	0456

..... [0914 0286] [0969 0286]
 MEDION 0896
 NEXXTECH .. 0949 1063 [0449 0327]
 PANASONIC 0437
 PHILIPS 0456 [0969 0286]
 PIONEER 1084
 POLAROID 0949
 RCA [0409 0225]
 RIO [0405 0245]
 SAMSUNG 0455 0963
 SANSUI 0394 0967
 SANYO [0416 0267]
 SEARS 0394
 SONY 0389
 SYLVANIA 0456
 [0458 0227] [0458 0236]
 SYMPHONIC 0456
 [0458 0227] [0899 0236]
 TECHWOOD 1071
 TOSHIBA 0924 0398
 WHITE WESTINGHOUSE
 [0458 0227]
 ZENITH [0405 0245]

DVR/SAT Combos

BELL EXPRESSVU 0647 0655
 DISH NETWORK 0655 0647
 DREAMBOX 0620

EHOSTAR 0655 0647
EXPRESSVU 0647 0655
FORTEC STAR 0569 0555 0556
HUGHES NETWORK 0621 0580
RCA 0653
PHILIPS 0621
PROSCAN..... 0653
SAMSUNG 0583
SONY 0657 0659
ULTIMATE TV..... 0653 0659
ZENITH 0656
DVR/CABLE Combos
CABLEVISION 0506
ILLICO 0506
PIONEER 0506
ROGERS 0506
SCIENTIFIC ATLANTA 0506
TIME WARNER 0506
VIDEOTRON 0506
DVR/DVD Combos
HUMAX 0912
ILO 0959
JVC 1072
LITEON 0959
MEDION 0959
PANASONIC 0387
PIONEER 0909 0977

TIVO 0912 0909

TOSHIBA 0983 0973

HTIB (Home Theater in a Box)

Where the code is listed as [### ###] the first is for the DVD and the second is for the AUDIO.
Otherwise just the one code operates both the DVD and the AUDIO.

AIWA [0414 0839]

AMW..... 0918

APEX 0436

BOSE 0672

CENTRIOS 1067 1055 0449

CLASSIC 1051

CRITERION 0448

DURABRAND 0449 0405

EMERSON 0940

INSIGNIA 1066

JVC 0964

KLH 0906

KOSS 0415

LENOXX 0931

LG 0972

MAGNAVOX 0915

..... [0969 0756] [0408 0756]

MYRON & DAVIS 0962

NESA 0962

NEXXTECH 1066 1055 0449

NORCENT..... 0928

ONKYO 0975

PANASONIC 0974
PHILIPS 0755 [0969 0756]
PIONEER 0976 0968
RADIO SHACK 0449 0894 0895
..... [0453 0879]
RCA 0449 0920 [0453 0879]
REGENT 0931
RIO [0405 0787]
SABA 0919
SAMSUNG 0454 0942
SELECTRON 1078 1083
SONY 0986
TECHWOOD 1071
TEVION 0448
ZENITH [0405 0787]

Retrieved from "https://kbase.x10.com/index.php?title=Four_Digit_Universal_Remote_Code_List&oldid=8336"

This page was last edited on 8 August 2012, at 18:19.