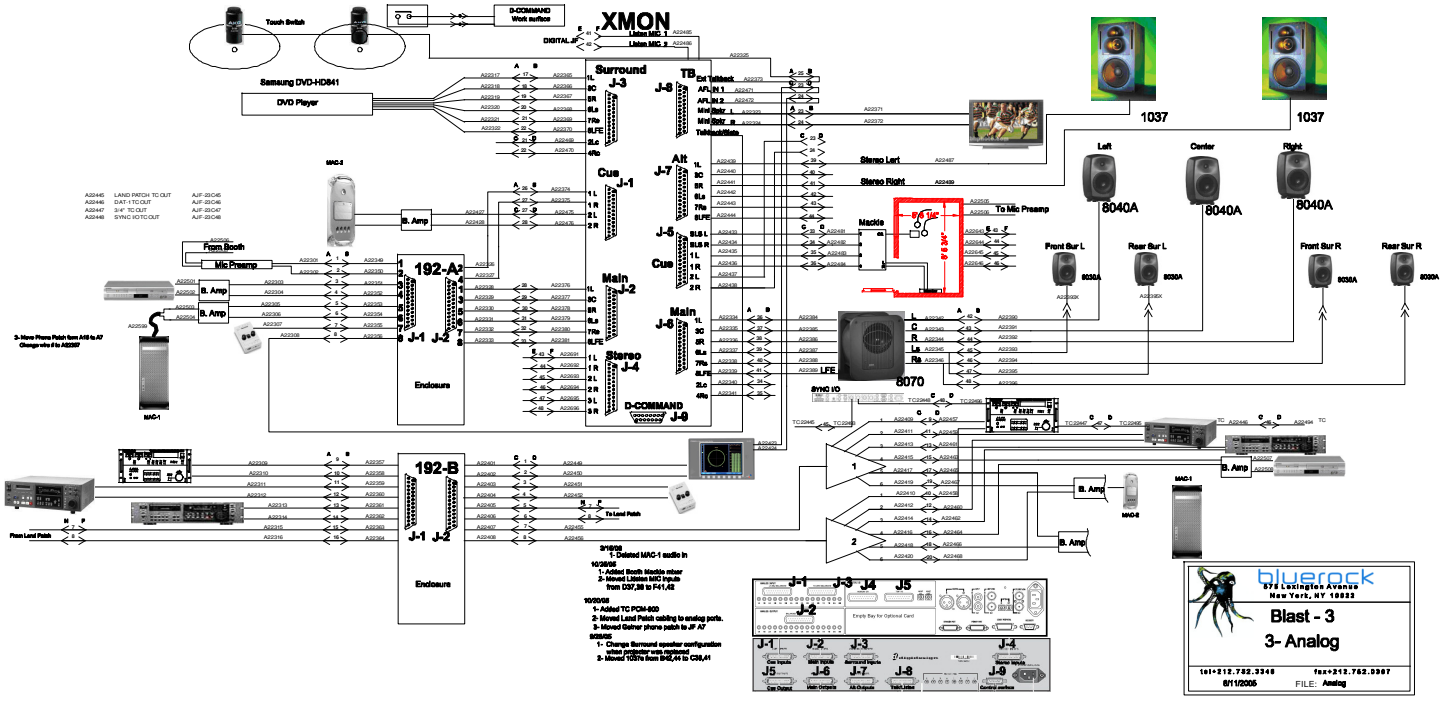
XMON
Listen MIC 1
Listen MIC 2
DIGITAL I/F
D-COMMAND
Work surface
Touch Switch
Samsung DVD-HD841
DVD Player
Surround
J-3
J-8
TB
Alt
J-7
J-5
Cue
J-1
Main
J-2
J-6
Stereo
J-4
D-COMMAND
J-9
MAC-2
MAC-1
B. Amp
Mic Preamp
From Booth
192-A2
192-B
Enclosure
J-1
J-2
Stereo Left
Stereo Right
Mackie
To Mic Preamp
1037
1037
Left
Center
Right
8040A
8040A
8040A
Front Sur L
Rear Sur L
Front Sur R
Rear Sur R
8030A
8030A
8030A
8030A
8070
L
C
R
Ls
Rs
LFE
sync I/O
From Land Patch
To Land Patch
3- Move Phone Patch from A16 to A7
Change wire # to A2357
2/16/05
1- Deleted MAC-1 audio in
10/30/04
1- Added Booth Mackie mixer
2- Moved Listen MIC inputs
from D37,38 to F41,42
10/20/04
1- Added TC PCM-500
2- Moved Land Patch cabling to analog ports.
3- Moved Gainer phone patch to JP A7
9/30/04
1- Change Surround speaker configuration
when subwoofer was installed
2- Moved 1037s from E42,44 to C39,41
J-1
J-3
J-4
J5
J-2
J-6
J-7
J-8
J-9
Empty Bay for Optional Card
Cue Inputs
Main Inputs
Surround Inputs
Stereo Inputs
Cue Outputs
Main Outputs
Alt Outputs
Patch Utility
Control Surface
bluerock
575 Lexington Avenue
New York, NY 10022
Blast - 3
3- Analog
tel•212.752.3348
fax•212.752.3987
6/11/2005
FILE: Analog